


Brief instruction to use the E - Focus

remote control

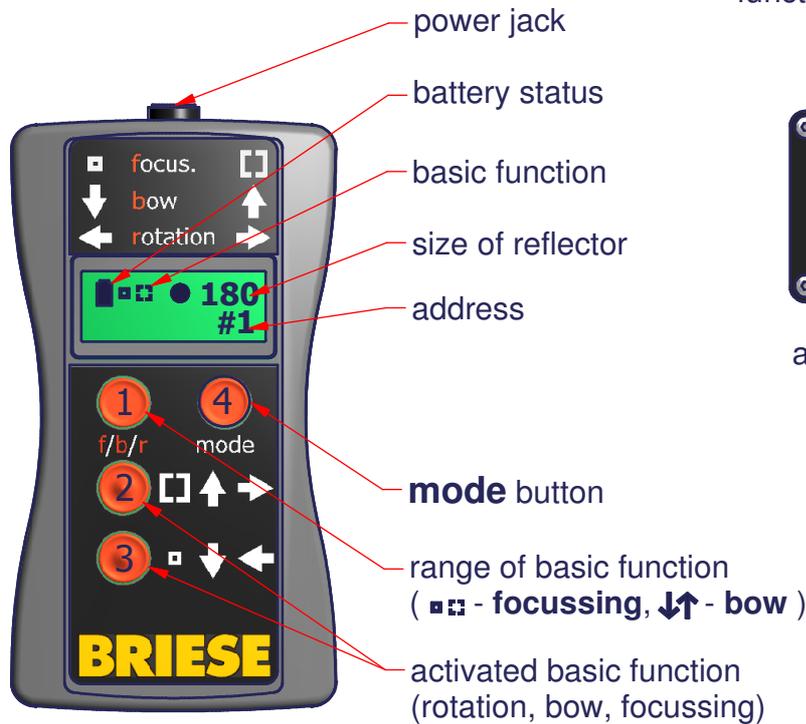

touch panel E - Focus



mode button - additional functions:

1. **ADDRESS** equipment communitation
2. * **RF CTRL** (Radio Frequency Control) radio frequency commutation
3. * **LEARN** equalize the radio frequency of the E - Focus and the remote control
4. **SCREEN** assortment of reflector size

ADDRESS

Choose with button 2 and 3 the address 1 - 8.
The remote control will respond to choosen E - Focus with the correct address.

SCREEN


With 2 and 3 you **must** enter the size of the reflector.
(*if not you can damage the reflector*).

*see brief instruction to coding the E -Focus

Brief instruction to coding the E - Focus

3 parameter have to synch in order for the remote control to work with the E- Focus

1. serial number
2. address of the E - Focus
3. radio frequency

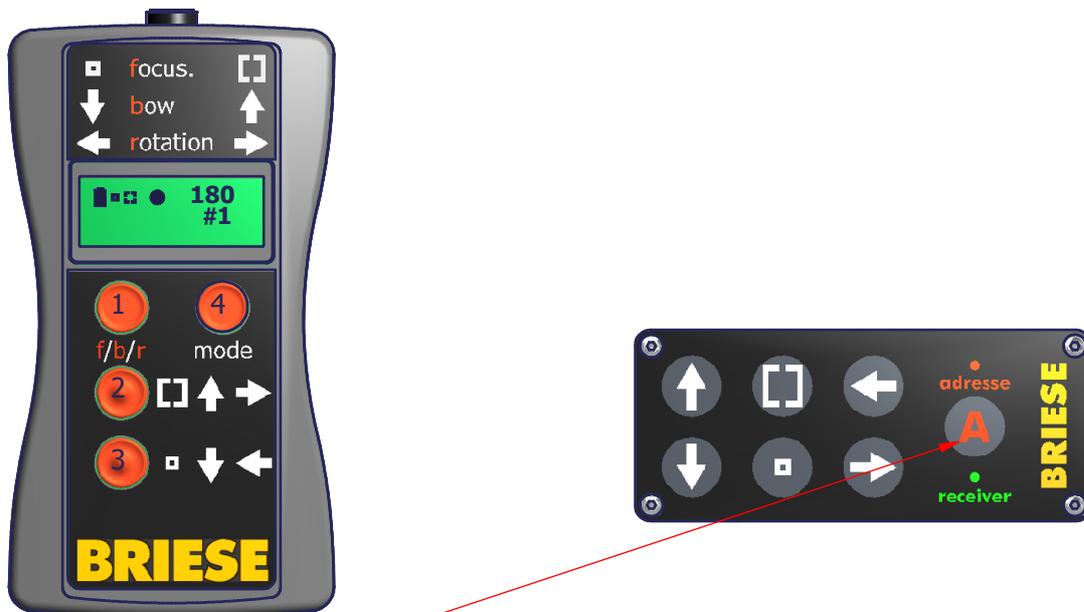

Confirm **A** on the E - Focus then choose address and radio frequency on the remote control. Enter "**LEARN**" with button 3. The red LED will blink 3 times on the E - Focus.

Now the login is complete and you can start.

You have additional features on the **mode** button (**4**)

* RF CTRL

You can choose between **2** and **3** the radio frequency for **EUROPE** or **USA**. Enter with "**LEARN**".

* LEARN

With button **3** on the remote control you will process the frequency. You will see "**OK**" on the display of the remote control.

Kurzanleitung zur **Bedienung** des E - Focus

Fernbedienung



Bedienfeld am E - Focus



mode Taste - hinterlegte Zusatzfunktionen:

1. **ADDRESS** Geräteumschaltung
2. * **RF CTRL** (Radio Frequency Control) Funkfrequenzumschaltung
3. * **LEARN** Anlernen der Geräte auf Funkfrequenz der Fernbedienung
4. **SCREEN** Auswahl der Schirmgröße

ADDRESS

Mit den Tasten 2 und 3 werden die Adressen von 1 bis 8 aufgerufen.
Die Fernbedienung spricht jetzt den gewählten E -Focus mit der richtigen Adresse an.

SCREEN

Mit den Tasten 2 und 3 **muß** die aktuell verwendete Schirmgröße angewählt werden.
(Arbeiten ohne richtig eingestellte Schirmgröße kann den Focus Schirm beschädigen).


*siehe Kurzanleitung Programmierung E -Focus

Kurzanleitung zur **Programmierung** des E - Focus

Es gibt 3 Parameter die zwischen Fernbedienung und E- Focus übereinstimmen müssen um eine Kommunikation zu gewährleisten.

1. Seriennummer der Fernbedienung (kann nicht verändert werden)
2. Adresse des E - Focus
3. Funkfrequenz

Der einfachste Weg alle 3 Parameter abzugleichen ist folgender:

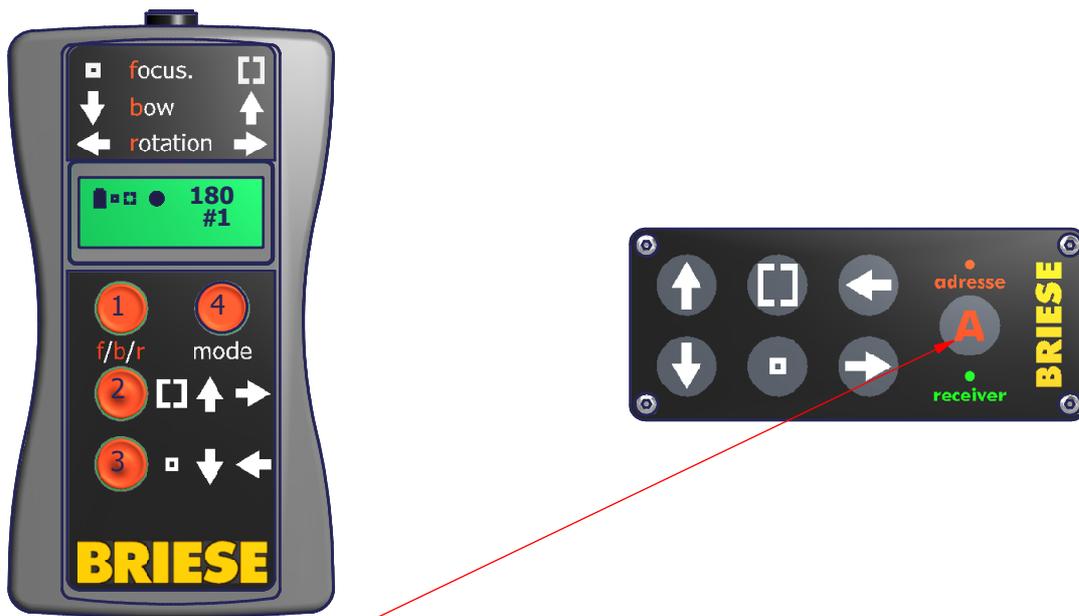

An dem E - Focus das **A** für Adresse betätigen, dann die gewünschte Adresse sowie Funkfrequenz an der Fernbedienung einstellen und zuletzt die "**LEARN**" - Funktion mit der Taste **3** auslösen.

Bei erfolgreicher Anmeldung blinkt die rote LED an dem E - Focus 3 mal.
Der E - Focus kann jetzt per Fernbedienung angesprochen werden und der Anmeldevorgang ist abgeschlossen.

Auf der **mode** Taste (**4**) - hinterlegte Zusatzfunktionen:

* RF CTRL

Mit den Tasten **2** und **3** können zwei Funkfrequenzen für **EUROPE** und **USA** aktiviert werden.
Die Aktivierung erfolgt über die "**LEARN**" -Taste.

* LEARN

Mit der Taste **3** auf der Fernbedienung wird die Frequenzumschaltung ausgeführt.
Die Fernbedienung zeigt bei erfolgreicher Umschaltung ein "**OK**" im Display.